Pioneer sound.vision.soul

Service Manual

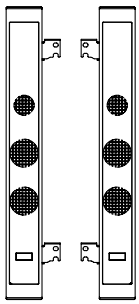

ORDER NO.
ARP3401

SPEAKER SYSTEM

PDP-S53-LR XZC/WL5

PDP-S54-LR XZC/WL5

This service manual is intended for qualified service technicians; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual.
Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.

WARNING

This product contains lead in solder and certain electrical parts contain chemicals which are known to the state of California to cause cancer, birth defects or other reproductive harm.

Health & Safety Code Section 25249.6 – Proposition 65

1. REASSEMBLY AND DISASSEMBLY PRECAUTIONS

- Do not pinch the connecting cord when attachting the speaker system.
- Make sure the L and R Holders are attached to the correct speakers.
- The speaker system is not serviceable and must be exchanged.

PIONEER CORPORATION 4-1, Meguro 1-chome, Meguro-ku, Tokyo 153-8654, Japan
PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.
PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936
©PIONEER CORPORATION 2006
T-ZZS SEPT. 2006 Printed in Japan

2. EXPLODED VIEWS AND PARTS LIST

NOTES: ● *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
● *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*

2.1 PACKING

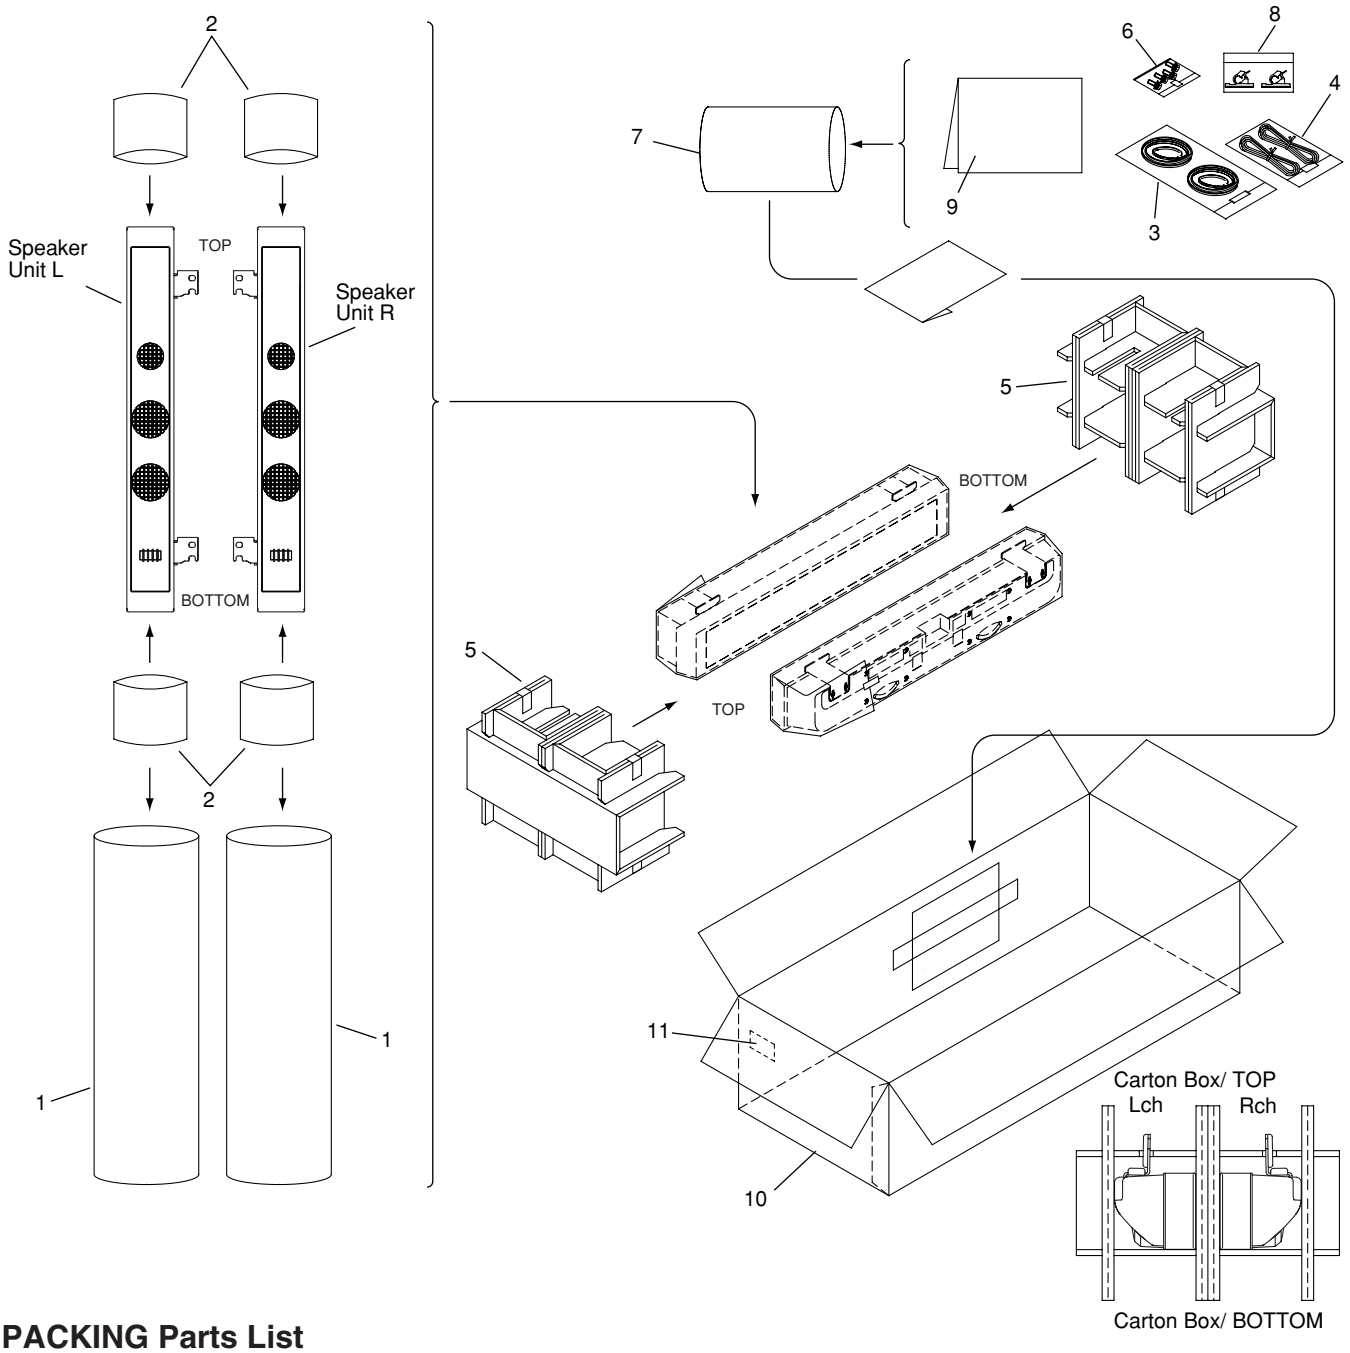

PACKING Parts List

Mark	No.	Description	Part No.
	1	Polyethylene Bag	AZE1179
	2	Protection Sheet	AZH1262
	3	Cushion	AZE1180
	4	Connection Cord	AZD1118
	5	Cushion Box	AZH1264
	6	Screw (M8 x 18)	AZB1527
	7	Polyethylene Bag	AZE1155
	8	Cord Cramp	AZE1188
	9	Operating Instructions (English, French, German, Italian, Spanish, Dutch)	AZR1182

Mark	No.	Description	Part No.
for PDP-S53-LR/XZC/WL5 model			
	10	Carton Box	AZH1263
	11	Label U	AZR1188
for PDP-S54-LR/XZC/WL5 model			
	10	Carton Box	AZH1265
	11	Label U	AZR1190

2.2 SPEAKER UNIT

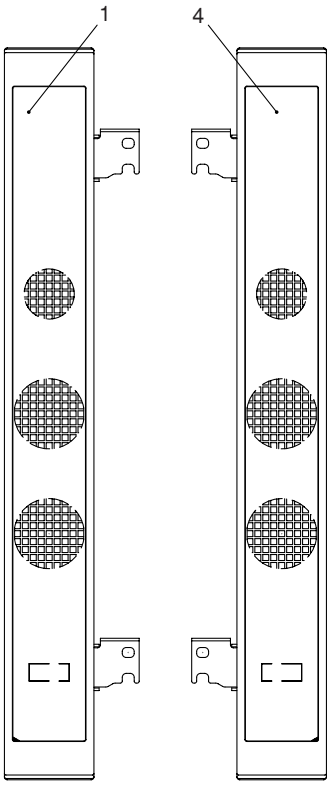

L [Front View] R

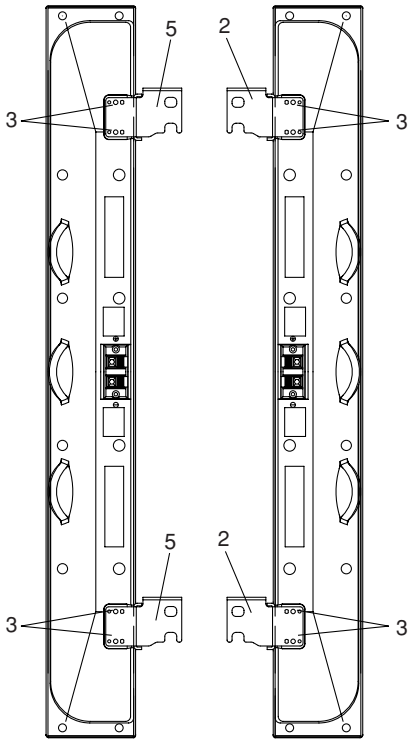

R [Back View] L

SPEAKER UNIT Parts List

for PDP-S53-LR/XZC/WL5 model

Mark	No.	Description	Part No.
	1	Speaker Unit L (S53)	AZP1182
	2	├ Holder L (S53)	AZN2689
	3	└ Screw (M4 x 8)	AZB1522
	4	Speaker Unit R (S53)	AZP1183
	5	├ Holder R (S53)	AZN2690
	3	└ Screw (M4 x 8)	AZB1522

for PDP-S54-LR/XZC/WL5 model

Mark	No.	Description	Part No.
	1	Speaker Unit L (S54)	AZP1184
	2	├ Holder L (S53)	AZN2689
	3	└ Screw (M4 x 8)	AZB1522
	4	Speaker Unit R (S54)	AZP1185
	5	├ Holder R (S53)	AZN2690
	3	└ Screw (M4 x 8)	AZB1522

3. SCHEMATIC DIAGRAM